 




# MISURA MONITOR 34" CURVED

USER MANUAL [ENGLISH](#)

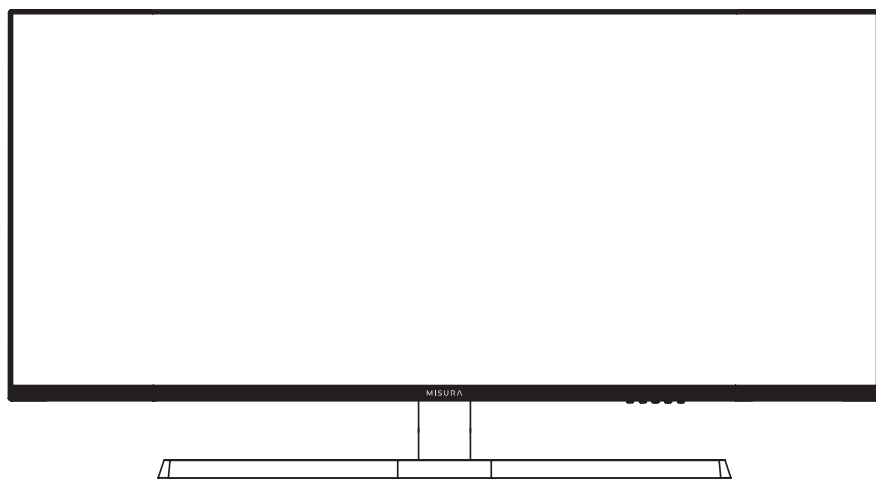

Model: P23EC34RWA01B – 165 Hz



WQHD resolution  
3440x1440



165 Hz refresh  
frequency



High Dynamic  
Range



Ultra Wide  
Viewing Angle



VA  
Curved panel



Moving Picture  
Response Time



FreeSync & G-Sync  
Technology



Low Blue Eyes  
Technology

## Dear Customer,

Thank you for having purchased this product. This document describes how to install and use the LCD colour monitor. Read this manual which contains information for correct, safe use carefully. Keep this manual at hand so that you can refer to it when needed.

## Product description and type of use

The LCD color monitor presents a very rugged structure. It is designed for continuous operation and can be used in closed circuit TV systems without risks of excessive fatigue. The Flat Panel Display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD).

## General features

- Display area
- Wall mounting with not included bracket
- One composite two DP, one HDMI
- Wide inclination to allow viewing either from a seated position or standing up and when moving from one position to the other

Multilingual OSD menu for easy setting and optimization of the display.

## Opening the box

Check that the packing and the contents are not visibly damaged. Contact the retailer immediately if parts are either missing or damaged. Do not attempt to use the device in this case. Send the product back in its original packing if it is damaged.

## Contents of the box

- LCD monitor
- Power Adaptor
- Power cable
- DP cable
- User's manual

Important Note: Accessories may be changed without prior notice.

## Power

- Only use the power unit provided to power the device.  
Check mains rating before plugging the power unit in.
- Do not pull the cable to unplug the device.

## Safety precautions

- Keep the device away from rain and humidity to prevent risk of fire and electrocution. Do not introduce material (solid or liquid) inside. If this should accidentally occur, disconnect the device from the mains and have it inspected by qualified personnel.
- Never open the device. In all cases, contact the qualified personnel or authorized service center for repairs.
- Keep the device away from children, to prevent accidental damage.
- Do not touch the device with wet hands to prevent electrical shock or mechanical damage.
- Do not use the device if it should fall or the external casing is damaged. Risk of electrocution if the device is used in such conditions. Contact the retailer or authorized installer.
- It is advisable to disconnect the power wire if the monitor is not used for a certain time.

## Installation precautions

- To prevent overheating the device, arrange it in a position allowing the flow of air through the slots in the casing. Ensure at least 5 cm of free space when installing inside a rack. For the same reason, do not install sources of heat, such as radiators or hot air ducts. Keep away from direct sunlight. Do not install in areas subject to excessive dust, mechanical vibrations or shocks.
- Do not arrange this device on an unstable surface, such as a tottering or slanted table. The device could fall causing injury or mechanical failures.
- Do not install the device in a place where it could be exposed to humidity or water. Do not direct a jet of water onto the device: risk of fire, electrocution or mechanical failure.
- Stop using the device if water or other material should penetrate inside: risk of fire and electrocution. Contact the retailer or authorized installer.
- Slots and openings in the cabinet are provided for ventilation. These openings must not be blocked or covered.

- Do not place heavy or heat generating objects on top of the device: this could damage the casing and/or increase internal temperature causing faults.
- Do not cover the device with a cloth while it is running to prevent deforming the external casing and overheating the internal parts: risk of fire, electrocution and mechanical failure.
- Keep magnets and magnetized objects away from the device to prevent faults.
- Do not use the device in presence of smoke, vapor, humidity, dust or intense vibrations.
- Wait for a while before operating a device immediately after transporting it from a cold place to a warm place and vice versa. Wait on average for three hours: this will allow the device to adapt to the new ambient (temperature, humidity, etc.).
- The monitor is provided with a plastic base and rubber feet. It can be positioned on a horizontal surface, such as a desk or a table. Make sure that the device is fastened firmly and that it is not resting on unstable supports or surfaces. Dropping could cause severe injury and damage the device.
- Remember to adjust the brightness and contrast to obtain a perfect image.
- The monitor can also be installed on the wall by means of a bracket (not provided).

#### **1.3.4 Cleaning the device**

- Rub delicately with a dry cloth to remove dust and dirt.
- Dip the cloth in neutral detergent if dirt cannot be eliminated with a dry cloth alone.
- Do not use volatile liquids (such as petrol, alcohol, solvents, etc.) or chemically treated clothes to clean the device to prevent deformation, deterioration or scratches to the paint finish.

#### **1.3.5 privacy and copyright**

- The LED monitor is a device for Gaming. Recording of images is subject to the laws in force in your country. Recording of images protected by copyright is forbidden.
- Product users shall be responsible for checking and respecting all local rules and regulations concerning monitoring and recording video signals. The manufacturing SHALL NOT BE LIABLE for use of this product not in compliance with the laws in force.

## MONITOR INPUTS



1



 
2



3



4



5



6

1 | Power ( 12V, 4A )

2 | USB

3 | HDMI

4 | DP2

5 | DP1

6 | AUDIO OUT

## ACCESSORIES

1 | 34 Inch Monitor

2 | Stand

3 | DP Cable

4 | Power Adaptor and Power Cable

5 | User manual

## INITIAL SETUP

### Connect the monitor to a power outlet.



1. Press the POWER button on the monitor or to turn it on (The indicator will be blue).
2. Connect the relevant cable to the corresponding input on the monitor. The source will be automatically detected.
3. To change between inputs, press the “Source” button to enter the source menu. Use the “◀” and “▶” buttons to choose the input source between Auto Select, DP1, DP2 and HDMI.

DP1  
DP2  
HDMI

## MENU OPTIONS

The menu for the monitor can be accessed by pressing the menu button on the control panel. This menu is separated into the following sub menus: Picture Settings, Image Settings, Colour Temperature, OSD Settings, Reset, and Miscellaneous options, details of each menu can be found in the following section.
  
## MONITOR BUTTONS

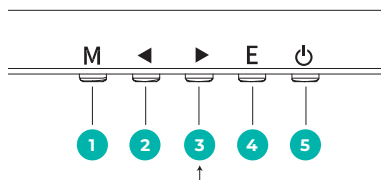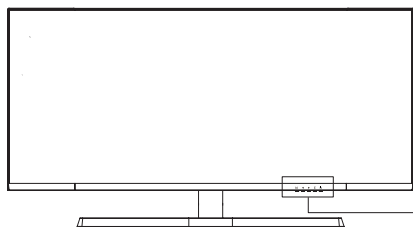

1	M	Open the Main OSD Menu and Select submenu
2	◀	Go Down on the Main OSD Menu Decrease the value of a selected item
3	▶	Go Up on the Main OSD Menu Increase the value of a selected item
4	E	Select signal source or Exit OSD
5	⏻	Turn the monitor on or Off

## SHORTCUT KEY GUIDE

1. Activate the Signal Input Selection menu. Use ◀ and ▶ to navigate and M to select the source.
2. Activate the Line of Sight feature. Further press to cycle between the colors or turn off.
3. Activate the ECO Mode feature. Further press to cycle through the presets.



## OSD MENU

### Input Source

DP1		Resolution: 3440x1440@165Hz
Input Source	● DP1	
Brightness/Contrast	DP2	
Color setting	HDMI	
Picture Quality Setting		
Display		
Audio		
Multi-Window		
OSD		
Other		

### Input Source:

Switch the signal input to DP1, DP2, HDMI, or have the monitor Auto Select the source.

## Brightness/Contrast

DP1		Resolution: 3440x1440@165Hz
Input Source	Brightness	87
<b>Brightness/Contrast</b>	Contrast	50
Color setting	DCR	Off
Picture Quality Setting		
Display		
Audio		
Multi-Window		
OSD		
Other		

**Brightness:** Change the display brightness value from 0 to 100.

**Contrast:** Adjust the display contrast value from 0 to 100.

**DCR:** Turn the Dynamic Contrast Ratio feature On or Off.

## Color setting

DP1		Resolution: 3440x1440@165Hz
Input Source	Gamma	2.2
Brightness/Contrast	Picture Mode	Standard
<b>Color setting</b>	Color Temperature	Warm
Picture Quality Setting	Hue	50
Display	Saturation	50
Audio	Low Blue Light	0
Multi-Window		
OSD		
Other		

**Gamma:** Change the display Gamma value to:2.0,2.2,2.4.

**Picture Mode:** Change the pre-set mode to: Standard, Text, Game,Movie, RTS or ECO.

**Color Temperature:** Change the color temperature to: Normal, Warm, Cool, User.

**Hue:** Change the display Hue value from 0 to 100.

**Saturation:** Change the display Saturation value from 0 to 100.

**Low Blue Light:** Change the display Saturation value from 0 to 100.

## Picture Quality Setting

DP1		Resolution: 3440x1440@165Hz
Input Source	Sharpness	50
Brightness/Contrast	Response Time	Off
Color setting	Noise Reduction	Off
<b>Picture Quality Setting</b>	Super Resolution	Off
Display	Dynamic Luminous Control	Off
Audio		
Multi-Window		
OSD		
Other		

**Sharpness:** Change the display Sharpness value from 0 to 100.

**Response Time:** Select the Response Time Value from, Low, Middle, High or turn it Off.

**Noise Reduction:** Select the Noise Reduction Value from, Low, Middle, High or turn it Off.

**Super Resolution:** Select the Super Reduction Value from, Low, Middle, High or turn it Off.

**Dynamic Luminance Control:** Turn the Dynamic Luminance Control feature On or Off.

## Display

DP1		Resolution: 3440x1440@165Hz
Input Source	Aspect Ratio	Wide Screen
Brightness/Contrast		
Color setting		
Picture Quality Setting		
<b>Display</b>		
Audio		
Multi-Window		
OSD		
Other		

**Aspect Ratio:** Change the image aspect ratio to Full Screen, Auto, 4:3 or 1:1.



## Audio

DP1		Resolution: 3440x1440@165Hz
Input Source	Mute	Off
Brightness/Contrast	Volume	50
Color setting	Audio Source	HDMI
Picture Quality Setting		
Display		
<b>Audio</b>		
Multi-Window		
OSD		
Other		

**Mute:** Turn On or Off to mute the audio source.

**Volume:** Change the audio source volume from 0 to 100.

**Audio Source:** Audio source interface switching HDMI DP1 DP2

## Multi-window

DP1		Resolution: 3440x1440@165Hz
Input Source	Multi-Window	Off
Brightness/Contrast	SubWin 2 Input	DP2
Color setting	PIP Size	Medium
Picture Quality Setting	PIP Position	TopRight
Display	Swap	
Audio		
<b>Multi-Window</b>		
OSD		
Other		

**Multi-window:** Adjust the multi-window to off / PIP / PBP.

## OSD

DP1		Resolution: 3440x1440@165Hz
Input Source	Language	English
Brightness/Contrast	OSD H-Position	50
Color setting	OSD V-Position	50
Picture Quality Setting	OSD Transparency	20
Display	OSD Time Out	20
Audio	OSD Rotation	Normal
Multi-Window		
<b>OSD</b>		
Other		

**Language:** Change the OSD Menu display language.

**OSD H Position:** Change the horizontal position of the OSD Menu.

**OSD V Position:** Change the vertical position of the OSD Menu.

**OSD Transparency:** Change the transparency value of the OSD

Menu from 0 to 100. | **OSD Timer Out:** Change how long the OSD Menu is on before it automatically exits. | **OSD Rotation:** Rotate the OSD Menu.

## Other

DP1		Resolution: 3440x1440@165Hz
Input Source	FreeSync (Adaptive Sync)	Off
Brightness/Contrast	HDR	Off
Color setting	MPRT	Off
Picture Quality Setting	Flicker Free	Off
Display	Cross	Off
Audio	Firmware Update	
Multi-Window	Reset	
OSD		
<b>Other</b>		

**FreeSync Mode:** Turn FreeSync On or Off. | **HDR:** Turn HDR On (requires HDMI 2.0 input). | **MPRT:** On or Off. | **Flicker Free:** On or Off. | **Cross:** On or Off. **Firmware Update:** Allow firmware updates. | **Reset:** Press this function to restore the original settings.

# TECHNICAL SPECIFICATION

 
Panel	Model	P23EG34RWA01B – 165 Hz
	Resolution	3440 × 1440
	Refresh	165 Hz
	Brightness (MAX)	400 cd/m <sup>2</sup>
	Response Time (Typical)	MPRT 1 ms
	Aspect Ratio	21:9
	Viewing Angle	178° (H) / 178° (V)
	Display color	16,7 Million colors
In/Out	HDMI	×1
	USB	×1
	DP	×2
	Audio	×1
ETC	Power Consumption	Typical 50W
	Power Source	DC 12V, 5A
	Operating Temperature	0~50°C
	Remote Control	No
Main Features	OSD	Eng/French/Spanish/Germany/ Korean/Japan/Chinese/Turkish
	HDR	Supported
	FreeSync/G-Sync	Supported
	Low blue light	Supported
	Flicker free	Supported
	Over drive	Supported
	PIP/PBP	Supported

**HDMI**™ The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Important Note: The specification may be changed without prior notice.



Manuál v Češtině otevřete zde /  
Manuál vo Slovenčine otvoríte tu /  
Open the English manual from here /  
Das Handbuch in Deutsch können Sie öffnen hier /  
A magyar nyelvű kézikönyvet itt tudja megnyitni /  
Odprite priročnik v slovenščini tukaj /  
Aprire il manuale in italiano qui /

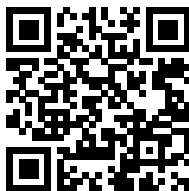

URL: [www.misura.shop/en/advisor/manuals-for-download-high-resolution-monitor-34-165-hz-curved-p23eg34rwa01](http://www.misura.shop/en/advisor/manuals-for-download-high-resolution-monitor-34-165-hz-curved-p23eg34rwa01)