 


# MISURA MONITOR 27" FLAT

USER MANUAL [ENGLISH](#)

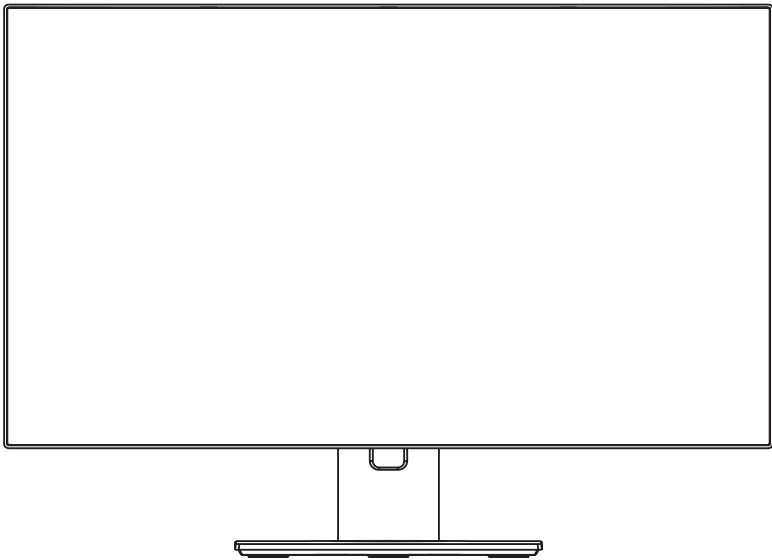

Model: P23PW27DQI01B – 75 Hz



QHD resolution  
2560x1440



Ultra Wide  
Viewing Angle



Super TFT  
display



OD  
Overdrive Time



Narrow Bezeles  
Design



Adaptive  
Sync



Power Delivery  
Technology



Low Blue  
Eyes Technology



## SAFETY INFORMATION

- **Read these instructions** - All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** - The safety and operating instructions should be retained for future reference.
- **Heed all warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** - All operating and usage instructions should be followed.
- Do not use this equipment near water, or in humid environments – The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or trapped, particularly at the plug and at the point where it exits from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart or stand is used, use caution when moving it to avoid any injuries or damage from it tipping over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The monitor should only be connected to a mains power supply as rated on the back of the equipment.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.

 
- Do not place heavy items on the cable as this may cause damage.
- When removing from a socket hold by the plug and not the wires.
- Disconnect the power immediately and seek professional help if the plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- Do not block ventilation slots on the back cover. The monitor can be placed in a cabinet but ensure at least 5 cm (2") clearance all around. Do not tap or shake the screen, this may damage Internal components.
- Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Warning: The wall plug socket is used as a disconnection device and should remain readily accessible.
- Warning: The batteries shall not be exposed to excessive heat such as direct sunlight or fire.



AT FULL VOLUME, PROLONGED LISTENING MAY DAMAGE THE USERS HEARING.

 <p>This warning sign is to warn of dangerous voltage inside the product.</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> <p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK</b></p> <p><b>DO NOT OPEN</b></p> </div> <p>CAUTION: To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>This warning sign is to alert you of important instructions accompanying the product.</p>
--	---	--

## MONITOR INPUTS

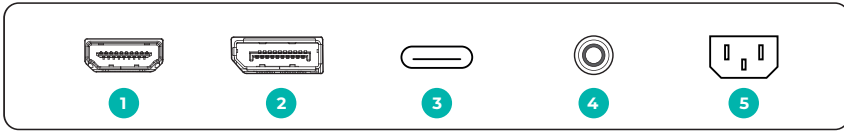

- 1 | HDMI
- 2 | DP
- 3 | USB-C


- 4 | AUDIO OUT
- 5 | AC Power

## ACCESSORIES

 - 1 | 27 Inch Monitor
- 2 | Stand
- 3 | USB-C Cable


- 4 | HDMI Cable
- 5 | Power Adaptor and Power Cable
- 6 | User manual

## MONITOR CONTROL BUTTONS

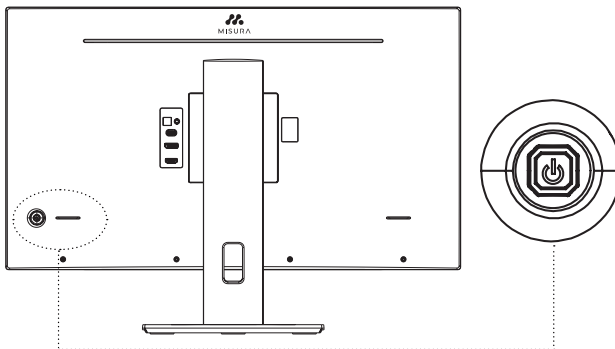

1. **Power.** Press and hold the switch to turn it on, and take a look to enter the selection menu mode.
2. **UP.** Change the value on selected menu/Switch a menu on OSD.
3. **DOWN.** Change the value on selected menu/ Switch a menu on OSD.
4. **LEFT.** Change the value on selected menu/ Switch a menu on OSD.
5. **RIGHT.** Change the value on selected menu/ Switch a menu on OSD.

# FUNCTION KEY GUIDE

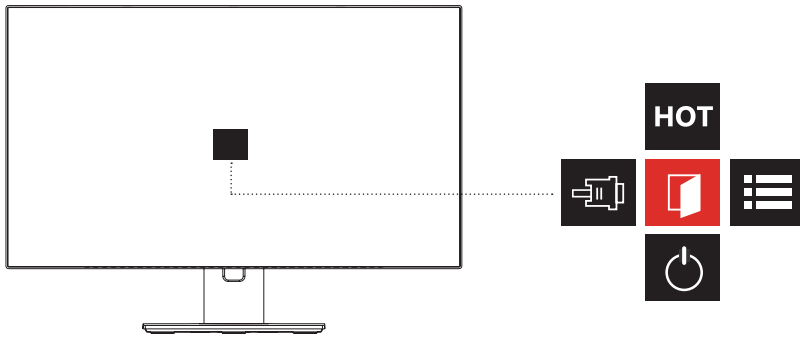 





Press the Monitor Button "Enter" key when the screen is turned on. The Function Key Guide will appear. To access the onscreen menu when the guide is displayed, press the corresponding direction button again.

Function Key Guide may vary depending on the function or product model. Please refer to the actual product.

## Monitor Button

## Action

	Selects by moving the monitor button in the function key guide screen. Press to enable or disable ECO Mode.
	Select to change the input signal by moving the monitor button in the Function Key Guide screen. A message will appear on the top left corner of the screen if the input signal has been changed.
	Selects by moving the monitor button in the function key guide screen. The OSD (On Screen Display) of your Monitor's feature appears.
	Select to turn the Monitor off by moving the monitor button in the function key guide screen.

## INITIAL SETUP

### Connect the monitor to a power outlet.

1. Press the POWER button on the monitor or to turn it on (The indicator will be blue).
2. Connect the relevant cable to the corresponding input on the monitor. The source will be automatically detected.
3. To change between inputs, press the “Source” button to enter the source menu. Use the “◀” and “▶” buttons to choose the input source between TYPE-C, DP and HDMI.



## OSD MENU CONTROLS

### Brightness



**BRIGHTNESS:** Allows the adjustment of the image brightness, according to ambient light in the room. Value “0-100” | **CONTRAST:** Allows the adjustment of the contrast between white and black areas of the image. Value “0-100”

 
**ECO:** Allows selection of image settings between the following: STANDARD, TEXT, MOVIE, GAME. | **DCR:** Allows the dynamic contrast of the picture to be turned ON and OFF | **HDR 10:** Allows to change the value between “OFF, AUTO, 2084 “.

## Image



**ASPECT:** Allows selection of video format of the between “WIDE,4:3 “.

## Color temp

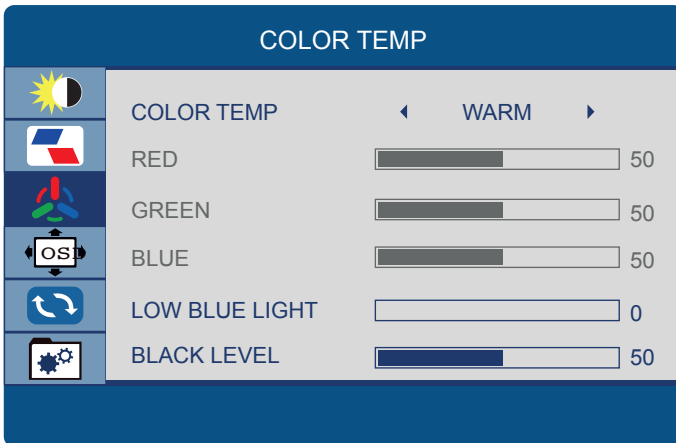

**COLOR TEMP.:** Allows adjustment of the colour settings between the following options: "Normal – Warm - Cool - User"- 7500 - 5800 - SRGB

**RED:** Allows adjustment of the red element of the image


**GREEN:** Allows adjustment of the green element of the image

**BLUE:** Allows adjustment of the blue element of the image

**LOW BLUE LIGHT:** Allows adjustment of the low blue effect of the display, value : 0-25-50-75-100.

**BLACK LEVEL:** Allows adjustment of the black level of the OSD, value“0-100”.

## OSD Setting

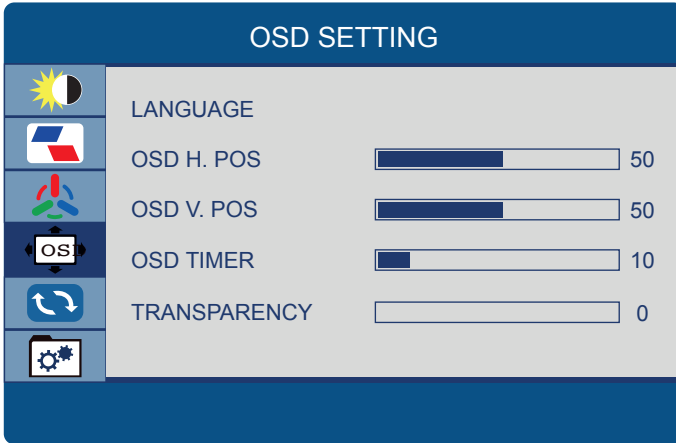 

**LANGUAGE:** Allows selection of desired language: “ENGLISH, FRENCH, TURKISH, ITALIAN, SPANISH, PORTUGUESE, CHINESE, DUTCH, JAPANESE, GERMAN, POLISH, AND KOREAN.”


**OSD H. POS:** Allows adjustment of the horizontal position of the OSD

**OSD V. POS:** Allows adjustment of the vertical position of the OSD

**OSD TIMER:** Allows adjustment of the duration of the OSD, value “5-60”

**TRANSPARENCY:** Allows adjustment of the transparency of the OSD, value “0-100”.

## Reset

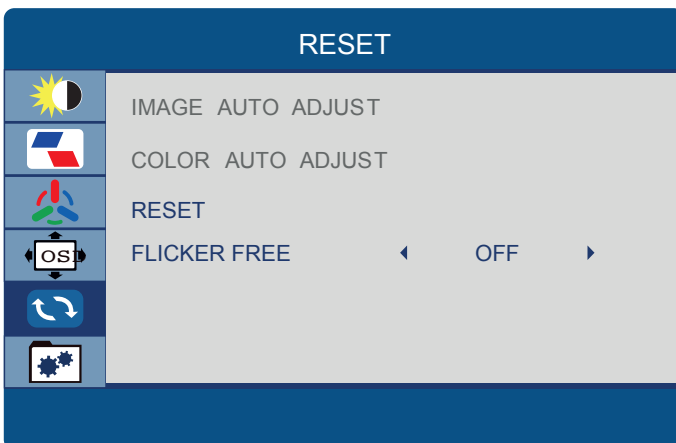 


**RESET:** Returns the monitor to its factory default settings.

**FLICKER FREE:** Allows flicker free to be turned ON and OFF.



## Misc

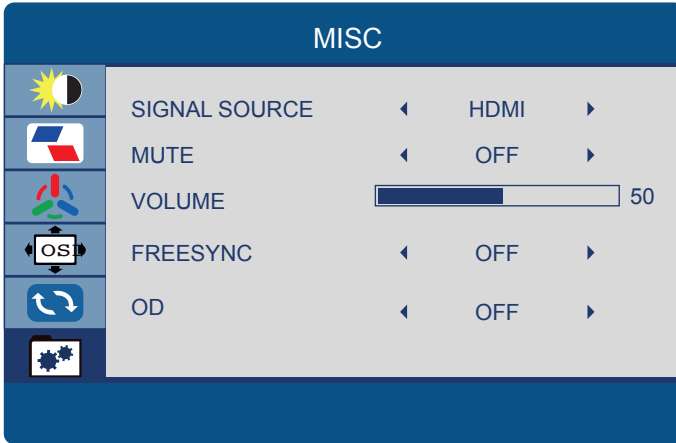 

**SIGNAL SOURCE:** Allows user to choose the signal source of the display "HDMI, DP and TYPE- C".

**VOLUME:** Allows adjustment of the volume of the monitor from "0-100".

**FREE SYNC:** Allows FreeSync to be turned ON and OFF.

**MUTE:** Allows Mute to be turned ON and OFF.


**OD:** Allows OD to be turned ON and OFF.

## TECHNICAL SPECIFICATION

 Model	P23PW27DQI01B – 75 Hz
Screen Size	27"
Aspect Ratio	16:9
Backlight	LED
Brightness	350 cd/m <sup>2</sup>
Panel Type	IPS
Resolution	2560 x 1440
Refresh Rate	75 Hz
Response Time	4 ms (with OD)
Viewing Angle	178° (H) / 178° (V)
Contrast Ratio	1000:1
VESA Mounting	100 x 100 mm
Colours 16.7M	(8bit)
AMD FreeSync	Supported
G-Sync	Supported
HDR	Supported
Signal Input	HDMI+DP+USB-C
Audio	out
Speakers	2x3W
Power Cable	Supported
Input Cable	HDMI 2.0, Type-C
Low Blue Light	Supported
Flicker Free	Supported
Power Consumption	Typical 40W (without power delivery)
Power Type	Internal power supply (AC 110-240V)

# HIGH ADJUSTABLE STAND

90° Rotation function

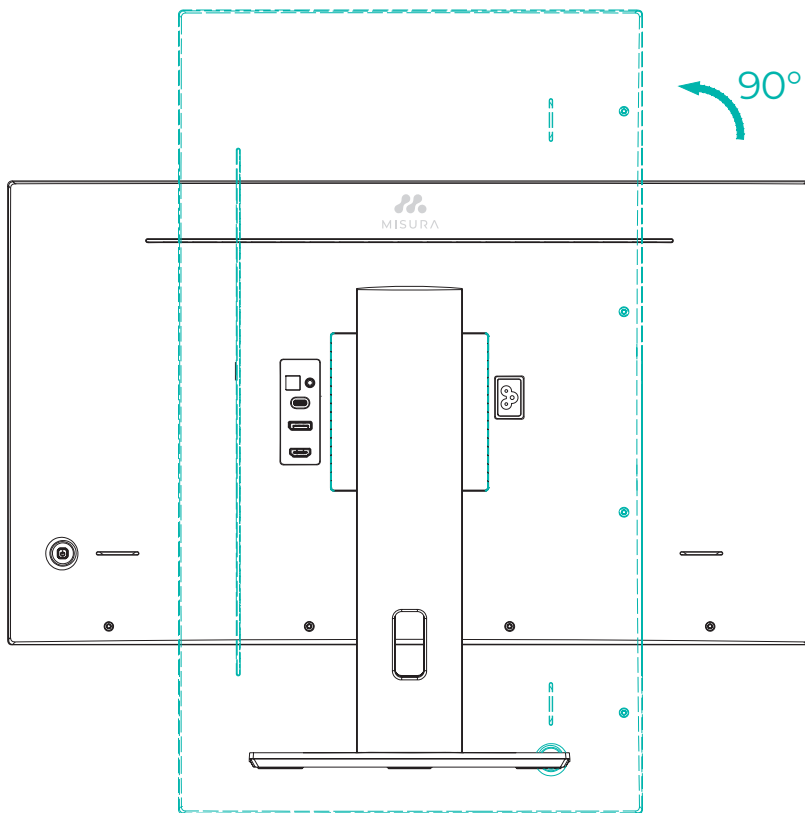



**Manuál v Češtině otevřete zde /  
Manuál vo Slovenčine otvoríte tu /  
Open the English manual from here /  
Das Handbuch in Deutsch können Sie öffnen hier /  
A magyar nyelvű kézikönyvet itt tudja megnyitni /  
Odprite priročnik v slovenščini tukaj /  
Aprire il manuale in italiano qui /**



**URL: [www.misura.shop/en/advisor/m16t-manual-for-download](http://www.misura.shop/en/advisor/m16t-manual-for-download)**